

Installation Guide

This procedure is designed as an installation aid. Skilled tradespeople that are familiar with general construction and electrical installation techniques should perform the installation. Licensed electricians should provide electrical installation connections. Installations and connections should be done in accordance with all national and local codes and permits. In no way is this document intended to construe warranty or fitness of use of the products described, nor is it intended to provide safety instruction for those installing the product.



⚡ WARNING

Before proceeding with installation or service maintenance of this product:



- Disconnect power to reduce electrical shock risk.
- Review the entire Installation Guide.
- Inspect this properly packaged product for any damage that may have occurred during transit.
- Verify product application complies with manufacturer design recommendations.
- Verify the availability of necessary tools and incidental material.
- Verify applicable code requirements. Field assembly and installation are subject to acceptance by local inspection authority.
- Appropriate safety equipment to be determined by end user, per applicable safety standards and precautions.

Suitable For Pole Outer Diameter



I: Can be installed on $\text{Ø}42\text{mm}$, $\text{Ø}60\text{mm}$, and $\text{Ø}76\text{mm}$ diameter poles.

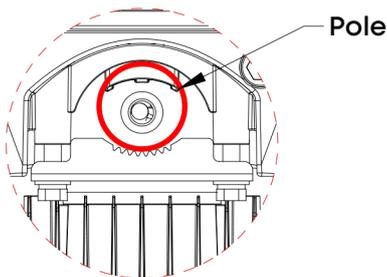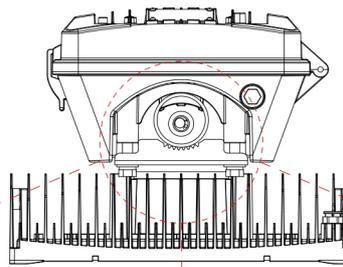


$\text{Ø}42\text{mm}$ diameter poles

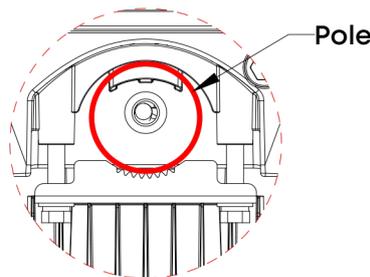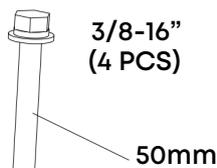


$\text{Ø}60\text{mm}$ diameter poles

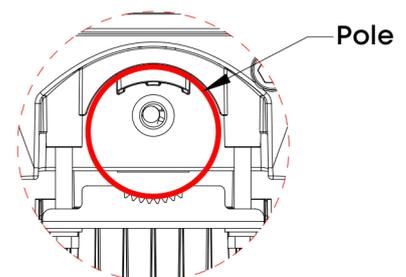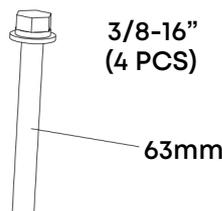

$\text{Ø}76\text{mm}$ diameter poles

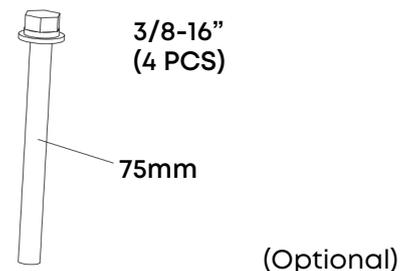


II: Tools and accessories

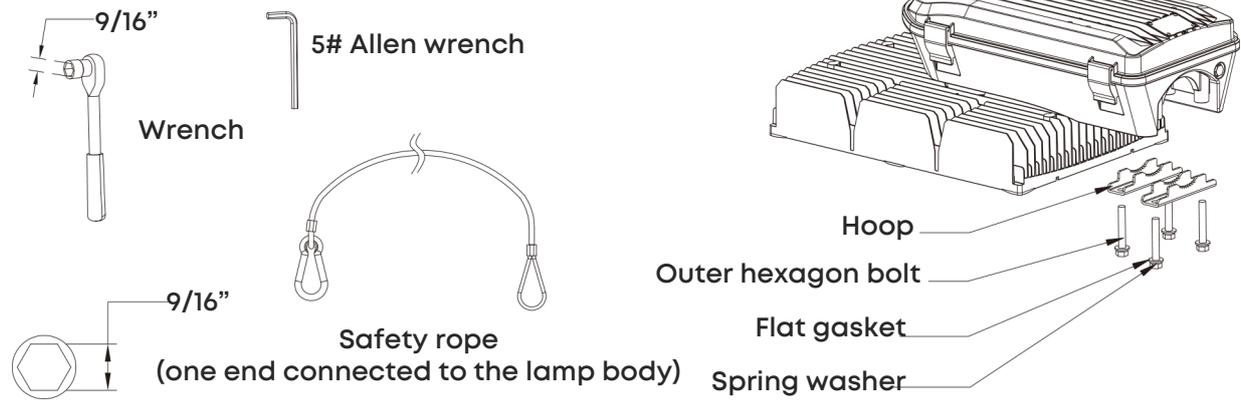


Light Fixture Installation


1. Loosen the four clamp screws (enough for the lamp post to fit), do not remove the screws.

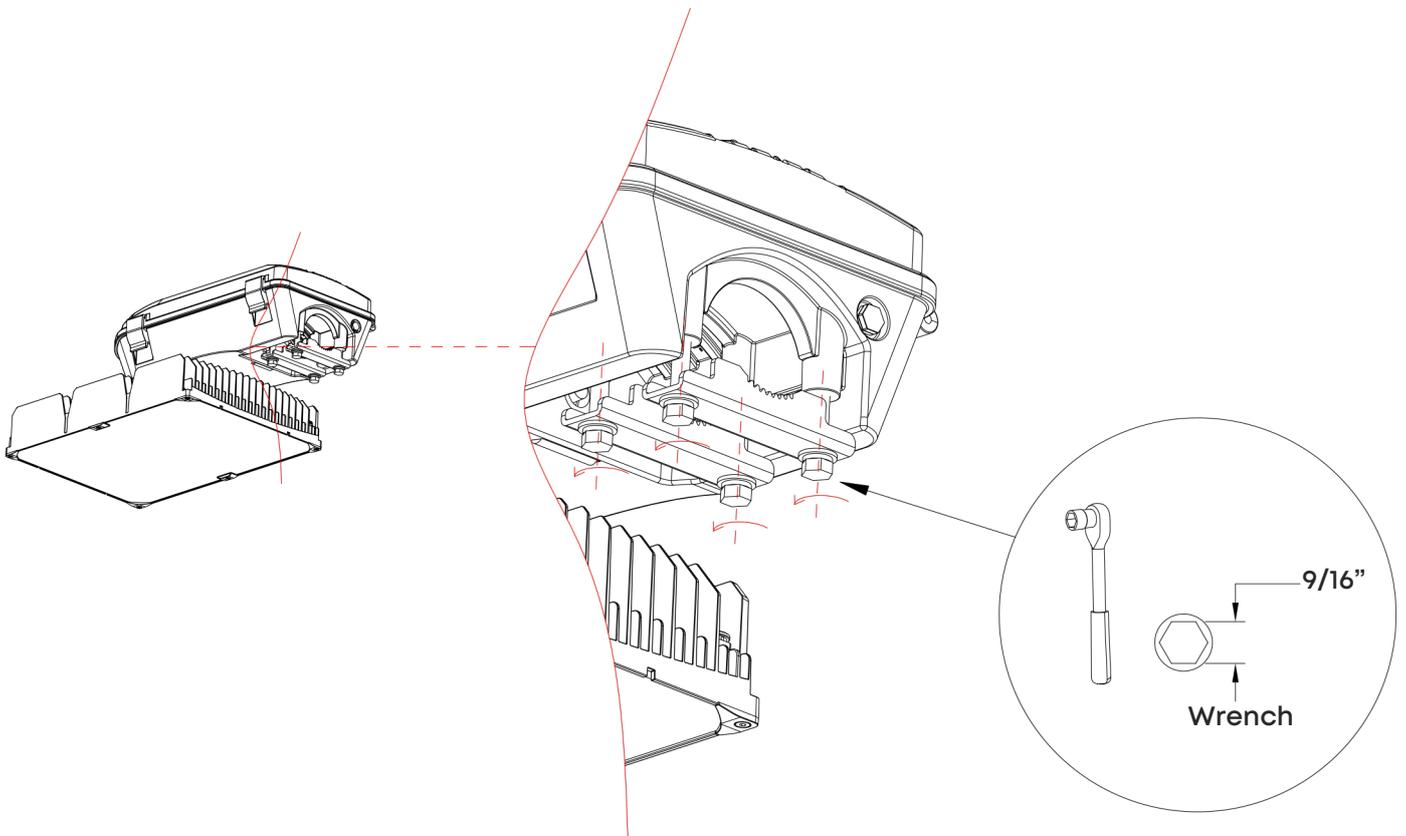

2. Connect the wires (L, N, GND wires should correspond to each other) between the light fixture and the lamp post, insert the light fixture into the lamp post, and choose the appropriate angle.

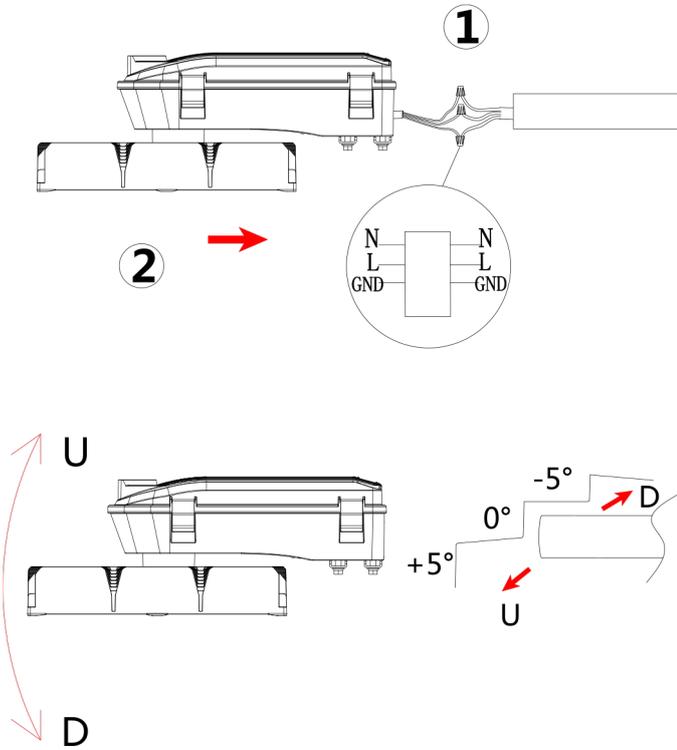


3. Check the spirit level, adjust the light fixture left and right until it's level.

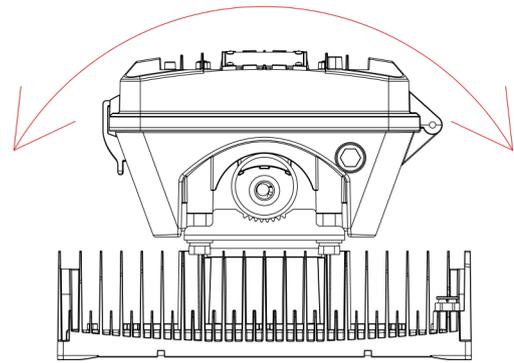


Spirit level



4. Tighten the clamp screws (torque 10-12N·m).

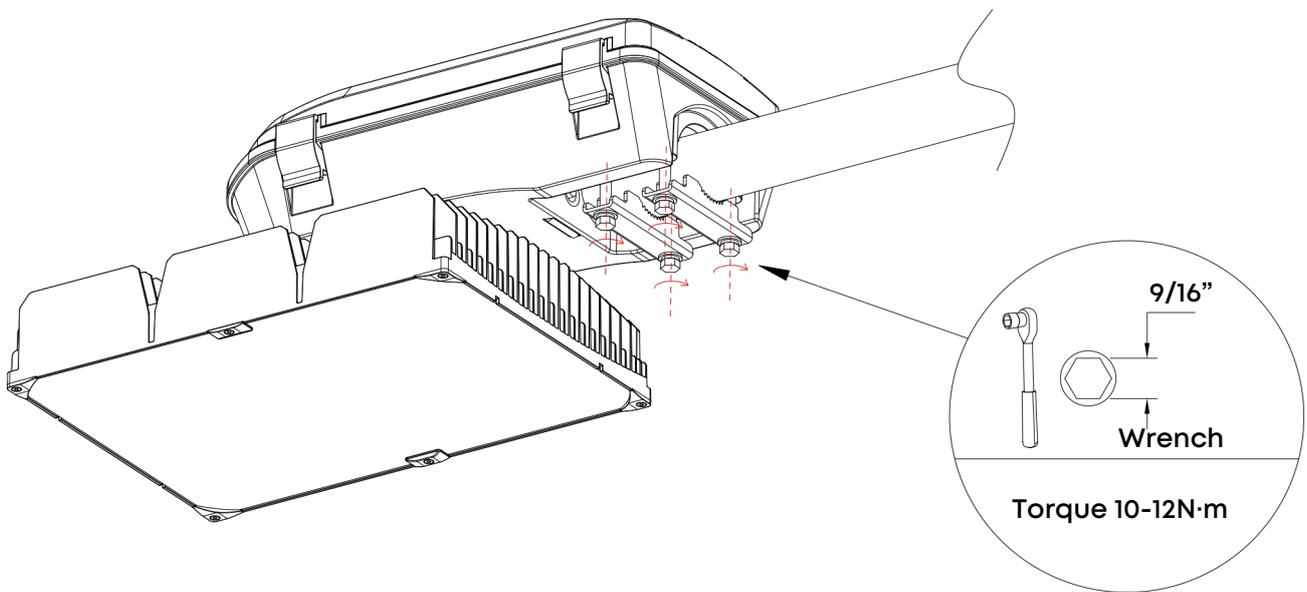


5. Install the steel wire rope. If there's no need to adjust the lamp head's horizontal angle, the light fixture installation is complete.

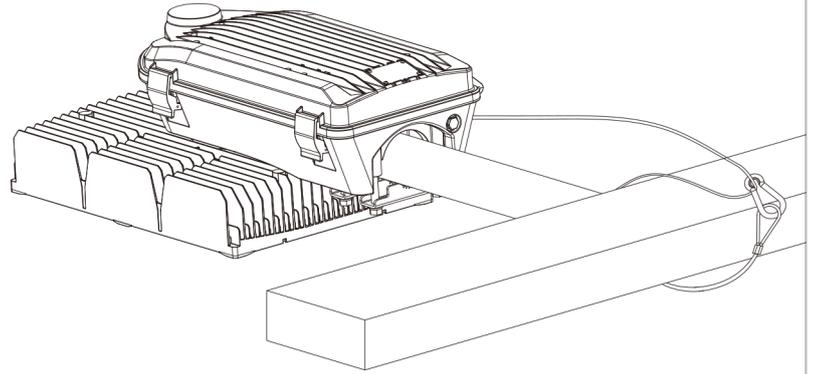



If you need to adjust the lamp head's horizontal angle, please follow these steps:

1. Loosen the four screws.

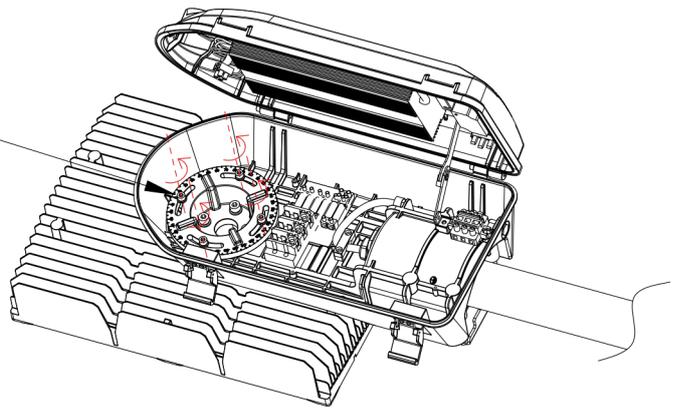


2. Loosen the screws by 2-3 turns; do not remove the screws. The lamp body can rotate at an angle of $\pm 20^\circ$.

3. Remove the four screws; the lamp body can rotate 360° (when the lamp post diameter is 3", the adjustable angle is $\pm 125^\circ$).

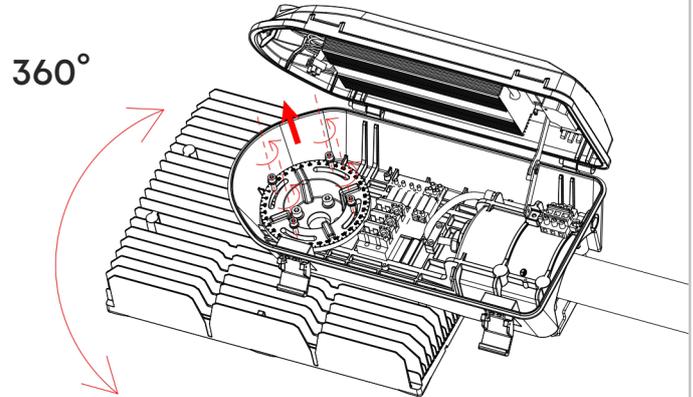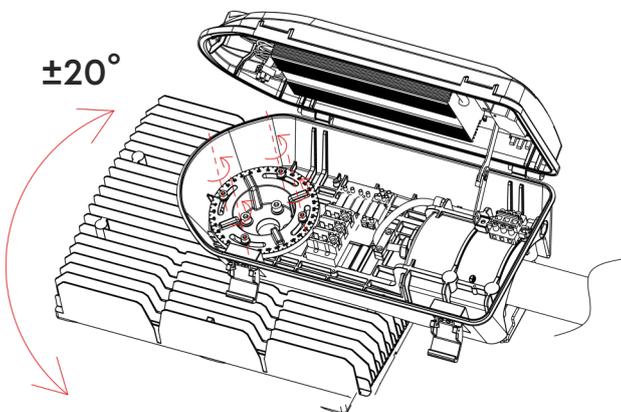

3. Tighten the screws

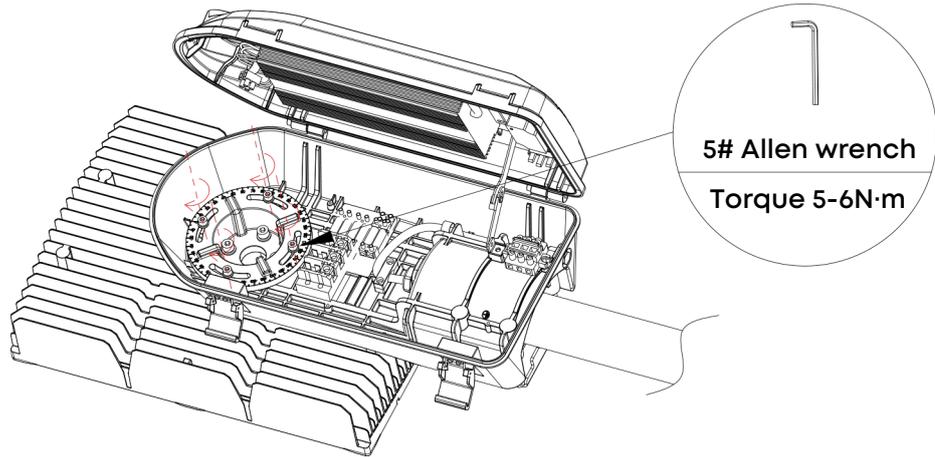


Attention


If you need to open the driver box cover for maintenance, follow the instructions in the manual to close the driver box cover as shown in the diagram below.

Caution: Improper operation will damage the support rod, and human operation is not within the scope of the after-sales service.

1. Rotate the driver box cover as indicated; then push the support rod in the direction of the arrow.

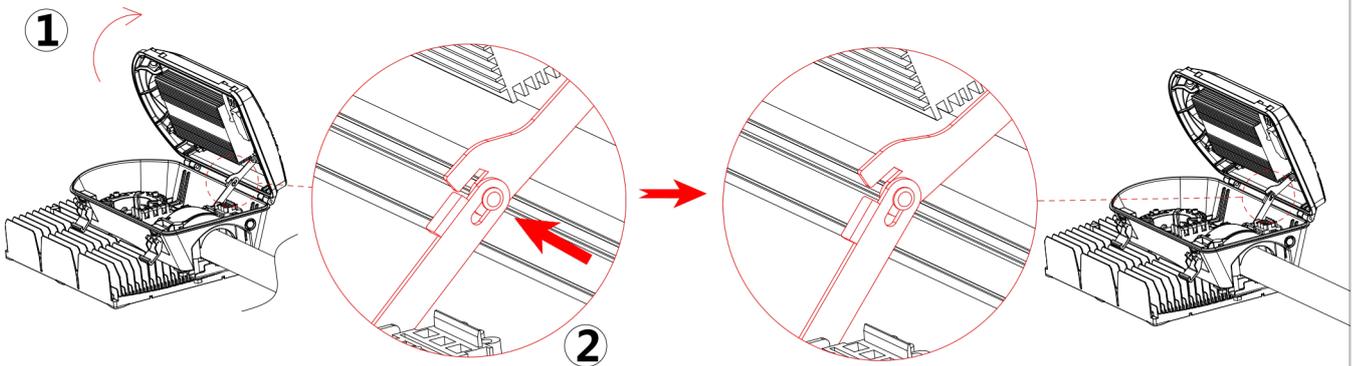

2. Close the driver box cover.

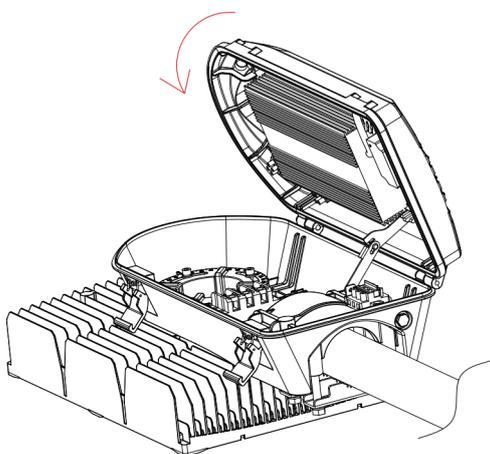

3. Press the buckle.

Press the buckle. Do not tap

